

Why laser cannot fire?

Please follow the step to check , go to next stop once confirm it's ok:

**1. check if the laser power supply be powered on;**


Make sure you have laser switch be turned on, check if the laser power supply be powered on from the left side of the machine;

Power light is on and the fan is working;



**2. check the parameter of your file, make sure the max power over 20% then try again;**

**3. Press the “Test” button(2.) of laser power supply. Check if the laser tube will emit laser or not(Before that, please unplug the green port (1.) shown as below picture)**

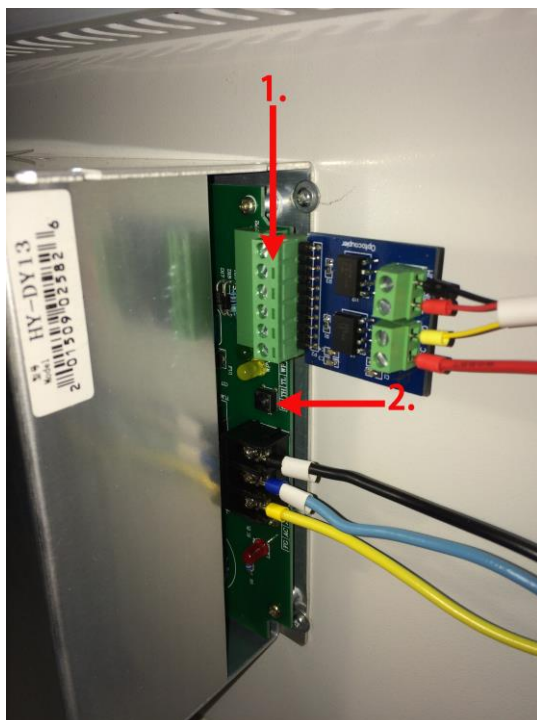

Press Test button, check if the Ammeter have reading and the laser tube will emit laser beam;

